11.

# SONY.

# FM/AM Compact Disc Player

Installation/Connections
Installation/Connexions



EXCD-90


Sony Corporation © 1995 Printed in Japan

# Parts for Installation and Connections

The numbers in the list are keyed to those in the instructions.

#### Matériel de montage fourni

Les numéros de la liste correspondent à ceux des instructions.

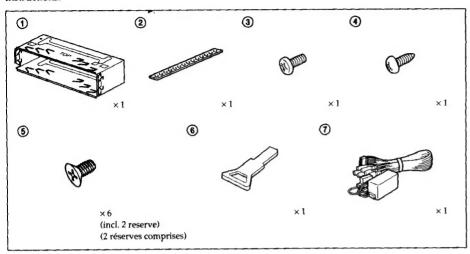

The release key ① is used for dismounting the unit. See the operating instructions manual for details.


La clé de dégagement (§) est nécessaire pour démonter l'appareil. Consulter le mode d'emploi pour plus de détails.

# Mounting the Unit in a Japanese Car

You may not be able to install this unit in some makes of Japanese cars. In such a case, consult your Sony dealer.

#### Installation de l'appareil dans une voiture japonaise

Si vous ne pouvez pas installer l'appareil dans une voiture japonaise, consultez votre revendeur Sony.

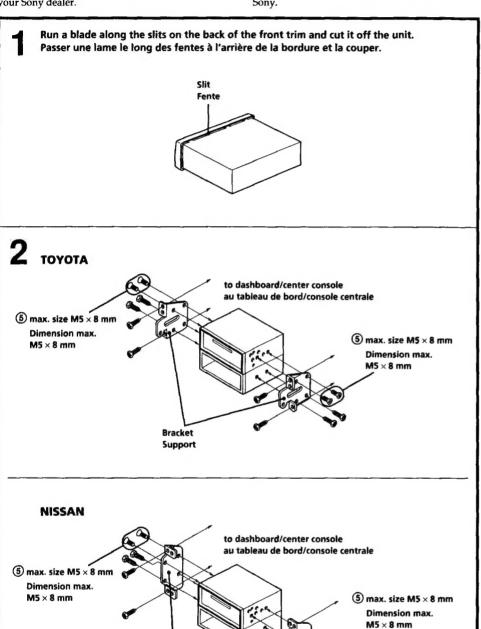

# Connections

# Caution

- This unit is designed for negative ground 12 V DC operation only.
- ground terminal of the car battery to avoid short Before making connections, disconnect the
  - Connect the yellow and red power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
  - Run all ground wires to a common ground

# Précautions

Connexions

courant continu de 12 V avec masse négative. Cet appareil est conçu pour fonctionner sur

d'alimentation à la borne positive de 12 V qui est

 Veiller à ne pas raccorder le fil rouge d'entrée alimentée quand la clé de contact est sur la

> Avant d'effectuer les connexions, débrancher la borne de terre de la batterie du véhicule pour éviter tout court-circuit.

autres branchements.

· Rassembler tous les fils de terre en un point de masse commun. • Brancher les fils d'entrée d'alimentation jaune et rouge seulement après avoir terminé tous les

position accessoires.

# If Your Car has no Accessory Position on the Ignition Key Switch POWER SELECT Switch

played. However, this setting may cause some car switch located on the bottom of the unit to the The illumination on the front panel is factory-set to be turned on even when the unit is not being position on the ignition key switch. To avoid this battery wear, set the POWER SELECT battery wear if your car has no accessory

© position, then press the reset button. The illumination is reset to stay off while the unit is not being played.

# Note

The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the B position.

# 3. puis appuyer sur la touche de

Si l'appareil est utilisé dans une voiture dont la clé de contact n'a pas

de position accessoires — Interrupteur POWER SELECT

L'éclairage du panneau avant est réglé en usine de

manière à s'allumer même quand l'appareil ne

fonctionne pas. Cependant, ce réglage risque

réinitialisation. L'éclairage est réglé pour rester éteint quand l'appareil n'est pas utilisé.

position 6, l'avertisseur du panneau avant ne fonctionne pas. Quand l'interrupteur POWER SELECT est réglé sur la

d'épuiser la batterie, régler l'interrupteur POWER


SELECT sur le socle de l'appareil sur la position

d'épuiser la batterie si l'appareil est utilisé dans

une voiture dont la clé de contact ne possède

pas de position accessoires. Pour éviter

Changer la position avec un tournevis de joailler ou un objet Change the position with a jeweler's screwdriver, etc. similaire.



# **Reset Button**


When the installation and connections are over, be sure to press the reset button with a ball-point pen

# **Fouche de réinitialisation**

Quand l'installation et les connexions sont terminées, appuyer sur la touche de





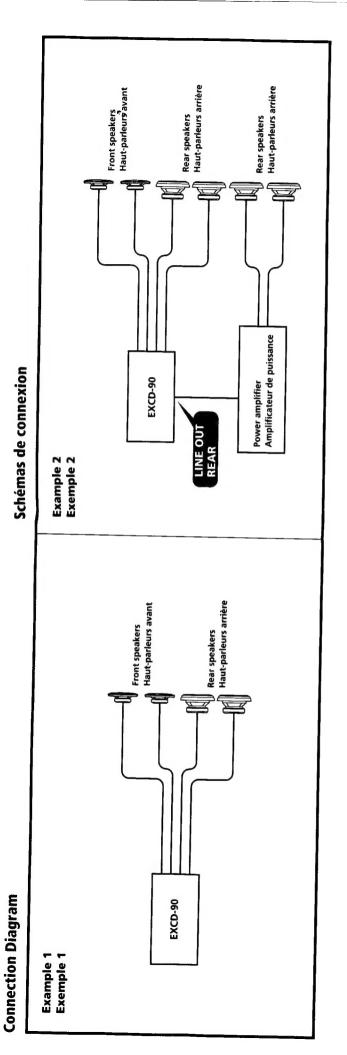



Reset button
Touche de réinitialisation




# onnection Diagram

# Schémas de connexion

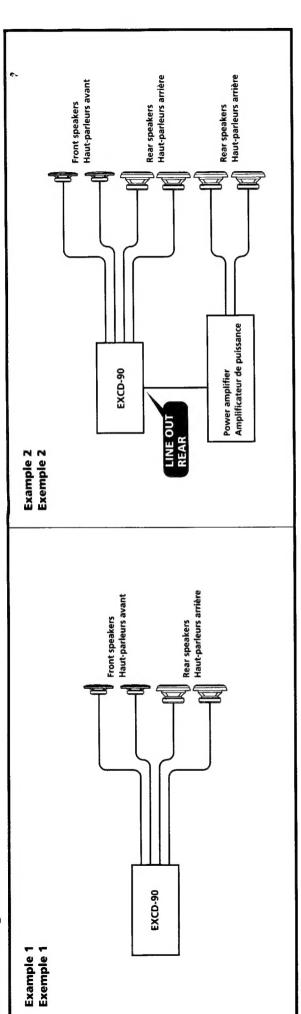



#### Connection Diagram 😞

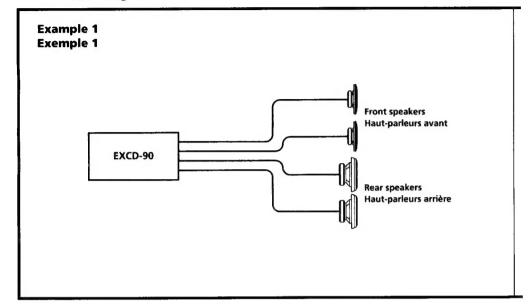

## **Connections**

#### Caution

- This unit is designed for negative ground 12 V DC operation only.
- Before making connections, disconnect the ground terminal of the car battery to avoid short circuits.
- Connect the yellow and red power input leads only after all other leads have been connected.
- Be sure to connect the red power input lead to the positive 12 V power terminal which is energized when the ignition key is in the accessory position.
- Run all ground wires to a common ground point.

#### If Your Car has no Accessory Position on the Ignition Key Switch

#### - POWER SELECT Switch

The illumination on the front panel is factory-set to be turned on even when the unit is not being played. However, this setting may cause some car battery wear if your car has no accessory position on the ignition key switch. To avoid this battery wear, set the POWER SELECT switch located on the bottom of the unit to the

**3 position, then press the reset button.** The illumination is reset to stay off while the unit is not being played.

#### Note

The caution alarm for the front panel is not activated when the POWER SELECT switch is set to the **1** position.

Change the position with a jeweler's screwdriver, etc.

Changer la position avec un tournevis de joailler ou un objet similaire.

#### **Reset Button**

When the installation and connections are over, be sure to press the reset button with a ball-point pen etc.



# Connexions

#### récautions

Cet appareil est conçu pour fonctionner sur courant continu de 12 V avec masse négative. Avant d'effectuer les connexions, débrancher la borne de terre de la batterie du véhicule pour éviter tout court-circuit.

Brancher les fils d'entrée d'alimentation **jaune** et rouge seulement après avoir terminé tous les autres branchements.

- Veiller à ne pas raccorder le fil rouge d'entrée d'alimentation à la borne positive de 12 V qui est alimentée quand la clé de contact est sur la position accessoires.
- Rassembler tous les fils de terre en un point de masse commun,


#### i l'appareil est utilisé dans une voiture dont la clé de contact n'a pas e position accessoires — Interrupteur POWER SELECT

éclairage du panneau avant est réglé en usine de anière à s'allumer même quand l'appareil ne nctionne pas. Cependant, ce réglage risque épuiser la batterie si l'appareil est utilisé dans le voiture dont la clé de contact ne possède is de position accessoires. Pour éviter épuiser la batterie, régler l'interrupteur POWER LECT sur le socle de l'appareil sur la position

**3.** puis appuyer sur la touche de réinitialisation. L'éclairage est réglé pour rester éteint quand l'appareil n'est pas utilisé.

#### Remarque

Quand l'interrupteur POWER SELECT est réglé sur la position (1), l'avertisseur du panneau avant ne fonctionne pas.

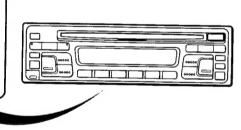


#### ouche de réinitialisation

and l'installation et les connexions sont minées, appuyer sur la touche de réinitialisation avec un stylo bille ou un objet pointu.

#### **Attaching the Front Panel**

Apply the right hand side of the front panel to the unit by attaching part (a) of the front panel to part (b) of the unit as illustrated and push it until clicks.

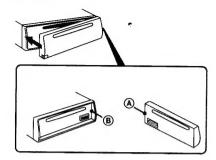

#### Note:

- Make sure that the front panel is the right way up when attaching it to the unit as it cannot be attached upside down
- Do not press the front panel hard against the unit when attaching it to the unit. It can easily be attached by pressing it lightly against the unit.
- When you carry the front panel with you, put it in the supplied front panel case.
- Do not press hard or give excessive pressure to the display windows of the front panel.
- Before removing the front panel, be sure to turn the power off. However, if you press the RELEASE button to detach the panel while the unit is still turned on, the power will be automatically turned off in order to protect the speakers from being damaged.
- Do not expose the front panel to direct sunlight, heat sources such as hot air ducts or leave it in a humid place. Never leave it on the dashboard etc. of a car parked in direct sunlight where there may be a considerable rise in temperature inside the car.

#### **Caution Alarm**


If you turn the ignition key to the OFF position without removing the front panel, the caution alarm will be activated and a beep tone will be heard for a few seconds (only when the POWER SELECT switch is set to the **(A)** position).

#### **Setting the Clock**

The clock has a 12-hour digital indication.


For example, setting it to 10:08

- 1 Display the time.
  (Press the OFF) or the limit operation.)
- 2 Press the SPL button for more than two seconds.




The hour digit blinks.

Set the hour digits.




3 Press the button momentarily.




The minute digit blinks.

Set the minute digits.



4 Press the ser button momentarily.



The clock activates.

#### Note

If the POWER SELECT switch on the bottom of the unit is set to the **(3)** position, the clock cannot be set unless the power is turned on. Set the clock after you have turned on the radio, or started CD playback.

EN

## Installation

#### **Precautions**

- Do not tamper with the four holes on the upper surface of the unit. They are for tuner adjustments to be done only by service technicians
- Choose the installation location carefully so that the unit will not hamper the driver during driving.
- Avoid installing the unit where it would be subject to high temperatures, such as from direct sunlight or hot air from the heater, or where it would be subject to dust, dirt or excessive vibration
- Use only the supplied mounting hardware for a safe and secure installation.

#### Mounting angle adjustment

Adjust the mounting angle to less than 20°.

#### How to Detach and Attach the Front Panel


Before installing the unit, detach the front panel.

#### To detach

Before detaching the front panel, be sure to press the OFF button first. Then press the RELEASE button to open up the front panel by pulling it towards you as illlustrated.


#### To attach

Align the parts (a) and (b), and push the front panel until it clicks.

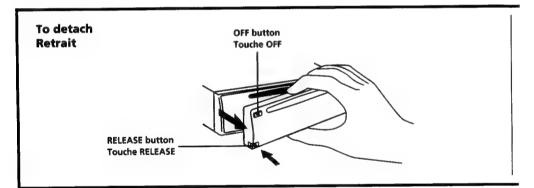

#### **Mounting Example**


Installation in the dashboard

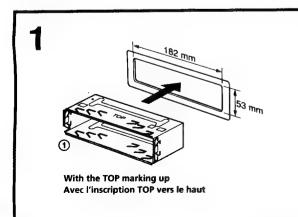

2



#### **Connections of Example**

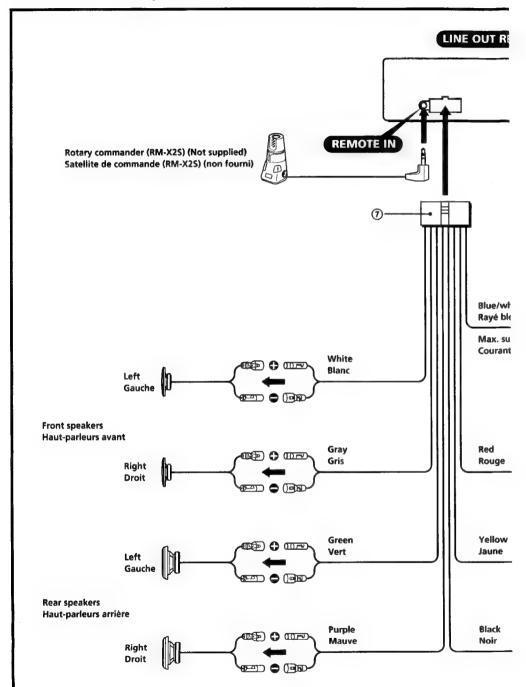

#### Notes on the control leads

- The AMP REM lead (blue/white striped) supplies +12 V DC when you turn on the unit. When the AMP REM lead is connected
  to the power antenna, the antenna will be extended as long as the unit is turned on.
- A power antenna without relay box cannot be used with this unit.


#### Memory hold connection

When the yellow power input lead is connected, power will always be supplied to the memory circuit even when the ignition key is turned off.

#### Notes on speaker connection

- $\bullet$  Before connecting the speakers, turn the unit off.
- Use speakers with an impedance of 4 to 8 ohms, and with adequate power handling capacities. Otherwise, the speakers may be
  demanded.
- Do not connect the terminals of the speaker system to the car chassis, and do not connect the terminals of the right speaker with
- those of the left speaker.

#### Connexions de l'exemple

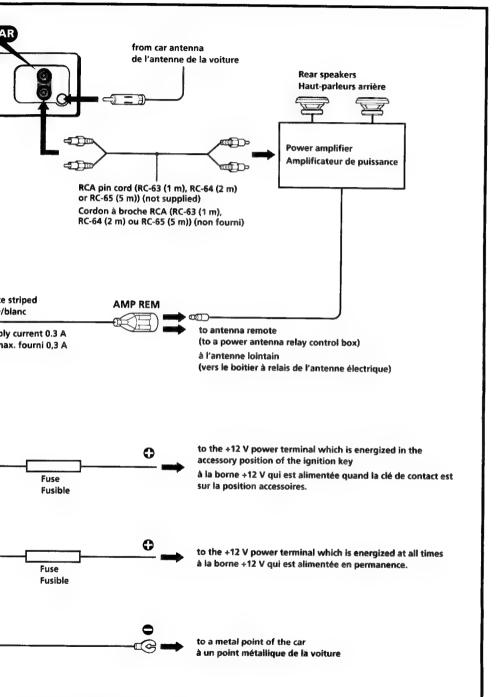

#### Remarques sur les fils de contrôle

- Le fil d'AMP REM (rayé bleu/blanc) fournit du courant continu de +12 V lorsque vous mettez l'appareil sous tension. Si le fil d'AMP REM est raccordé à l'antenne électrique, l'antenne restera déployée aussi longtemps que l'appareil sera sous tension.
- Une antenne électrique sans boîtier de relais ne peut pas être utilisée avec cet appareil.

#### Connexion pour la conservation de la mémoire

Lorsque le fil d'entrée d'alimentation jaune est connecté, le circuit de la mémoire est alimenté en permanence même si la clé de contact est sur la position d'arrêt.

#### Remarques sur la connexion des haut-parleurs

- Avant de raccorder les haut-parleurs, mettre l'appareil hors tension.
- Utiliser des haut-parleurs ayant une impédance de 4 à 8 ohms et une capacité adéquate sous peine de les endommager.
  Ne pas raccorder les bornes du système de haut-parleurs au châssis de la voiture et ne pas connecter les bornes du haut-parleur droit à celles du haut-parleur gauche.
- Ne pas tenter de raccorder les haut-parleurs en parallèle.

#### SONY

# FM/AM Compact Disc Player

Operating Instructions	EN ·
Mode d'emploi	Free

#### Owner's Record

The model and serial numbers are located on the bottom of the unit. Record the serial number in the space provided below. Refer to these numbers whenever you call upon your Sony dealer regarding this product.

Model No. EXCD-90 Serial No. \_\_\_\_\_

For installation and connections, see the supplied installation/connections manual.

En ce qui concerne l'installation et les connexions, consulter le manuel d'installation/connexions fourni.



EXCD-90

© 1995 by Sony Corporation

#### **Warning**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

#### **CAUTION**

The use of optical instruments with this product will increase eye hazard.

#### **Features**

#### General

- **Detachable-front panel** enables you to take the front panel away with you when you leave your car (page 4).
- Caution alarm will be activated if you turn off the ignition key without removing the front panel from the unit.
- Built-in power amplifier (max. output: 20 W × 4 ch) enables you to enjoy a 4 speaker.

#### **CD** player section

- 1 bit DAC (Digital-to-Analog Converter) for a clear sound reproduction.
- Quick recovery mechanism for preventing sound skipping.
- Convenient functions such as the Intro Scan Function for searching a desired track, the Repeat Play Function for playing a track repeatedly, and the Shuffle Play Function for playing tracks in random order can be used.

#### **Tuner section**

- Up to 24 stations can be preset: 18 stations on FM and 6 stations on AM.
- BTM (Best Tuning Memory) function automatically searches and stores the stations with the strongest signals on the preset number buttons in order of frequency (page 8).

### Optional the rotary commander can be used.

You can use the rotary commander (RM-X2S) which can be operated like the wiper or headlight switch of your car while driving.



#### **Table of Contents**

Precautions  Detaching and Attaching the Front Panel  Setting the Clock	
CD Player Operation	
Playing a CD	ŧ
Ejecting the CD	
Locating the Beginnings of the Tracks  — AMS (Automatic Music Sensor)	
Function	(
— Manual Search Function	6
Searching the Desired Track — Intro Scan Function	
Playing Tracks Repeatedly	
Repeat Play Function  Playing Tracks in Random Order	t
— Shuffle Play Function	7
Radio Reception	
Searching for the Stations Automatically  — Automatic Tuning	
If FM Stereo Reception is Poor  — Monaural Mode	
Tuning in by Adjusting the Frequency  — Manual Tuning	
Memorizing Stations Automatically — BTM (Best Tuning Memory) Function	
Memorizing Only the Desired Stations	
Receiving the Memorized Stations	3

#### **Table of Contents**

Precautions  Detaching and Attaching the Front Panel  Setting the Clock	4
CD Player Operation	- Contract C
Playing a CD	•
Ejecting the CD	
Locating the Beginnings of the Tracks  — AMS (Automatic Music Sensor)  Function	
Locating the Desired Part a Track  — Manual Search Function	
Searching the Desired Track  — Intro Scan Function	(
Playing Tracks Repeatedly — Repeat Play Function	(
Playing Tracks in Random Order — Shuffle Play Function	

# Radio Reception

Searching for the Stations Automatically  — Automatic Tuning
If FM Stereo Reception is Poor  — Monaural Mode
Tuning in by Adjusting the Frequency  — Manual Tuning
Memorizing Stations Automatically — BTM (Best Tuning Memory) Function
Memorizing Only the Desired Stations
Receiving the Memorized Stations


#### Other Functions

Adjusting the Sound Characteristics	9
Enjoying Bass and Treble even at Low Volume  — Loudness Function	
Muting the Sound Quickly  — Mute Function	9
Muting the Beep Tone	9
Maintenance	9
Dismounting the Unit	.10
	.10
The Rotary Commander Labels Location of Controls	
The Rotary Commander Labels Location of Controls	. 11
The Rotary Commander Labels	. 12

ΕN

#### **Precautions**

 Before operating the unit for the first time or after replacing the car battery, press the reset button with a ball-point pen etc., and then start operating the unit.



- If your car was parked in direct sunlight resulting in a considerable rise in temperature inside the car, allow the unit to cool off before operating it.
- If no power is being supplied to the unit, check the connections first. If everything is in order, check the fuse.
- If no sound comes from the speakers of a 2-speaker system, set the fader control to the center position.

If you have any questions or problems concerning your unit that are not covered in this manual, please consult your nearest Sony dealer.

#### **Notes on CD**



A dirty or defective disc may cause sound dropouts in playing. To enjoy optimum sound, handle the disc as follows.

Handle the disc by its edge, and to keep the disc clean, do not touch the surface.



Do not stick paper or tape on the labeled surface.



Do not expose the discs to direct sunlight or heat sources such as hot air-ducts, or leave them in a car parked in direct sunlight where there can be a considerable rise in the temperature inside the car.



Before playing, clean the discs with an optional cleaning cloth. Wipe each disc from the center of the disc outward.

Do not use solvents such as benzine, thinner, commercially available cleaners or antistatic spray intended for analog discs.

#### **Notes on Moisture condensation**


On a rainy day or in a very damp area, moisture may condense on the lenses inside the CD player. Should this occur, the unit will not operate properly. In this case, remove the disc and wait for about an hour until the moisture has evaporated.

# Detaching and Attaching the Front Panel

The front panel of this unit can be detached in order to prevent the unit from being stolen.

#### **Detaching the Front Panel**


Before detaching the front panel, be sure to press the OFF button first. Then press the RELEASE button to open up the front panel and detach the panel by pulling it towards you as illustrated.

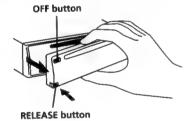

Be sure not to drop the panel when detaching it from the unit.

#### Attaching the Front Panel

Apply the right hand side of the front panel to the unit by attaching part (a) of the front panel to part (b) of the unit as illustrated and push it until clicks.

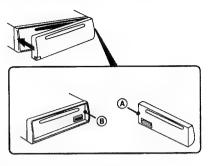

#### Note:


- Make sure that the front panel is the right way up when attaching it to the unit as it cannot be attached upside days.
- Do not press the front panel hard against the unit when attaching it to the unit. It can easily be attached by pressing it lightly against the unit.
- When you carry the front panel with you, put it in the supplied front panel case.
- Do not press hard or give excessive pressure to the display windows of the front panel.
- Before removing the front panel, be sure to turn the power off. However, if you press the RELEASE button to detach the panel while the unit is still turned on, the power will be automatically turned off in order to protect the speakers from being damaged.
- Do not expose the front panel to direct sunlight, heat sources such as hot air ducts or leave it in a humid place. Never leave it on the dashboard etc. of a car parked in direct sunlight where there may be a considerable rise in temperature inside the car.

#### **Caution Alarm**

If you turn the ignition key to the OFF position without removing the front panel, the caution alarm will be activated and a beep tone will be heard for a few seconds (only when the POWER SELECT switch is set to the **(A)** position).

#### **Attaching the Front Panel**

Apply the right hand side of the front panel to the unit by attaching part (a) of the front panel to part (b) of the unit as illustrated and push it until clicks.

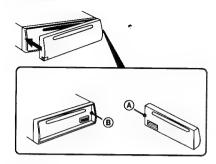

#### Note:

- Make sure that the front panel is the right way up when attaching it to the unit as it cannot be attached upside down.
- Do not press the front panel hard against the unit when attaching it to the unit. It can easily be attached by pressing it lightly against the unit.
- When you carry the front panel with you, put it in the supplied front panel case.
- Do not press hard or give excessive pressure to the display windows of the front panel.
- Before removing the front panel, be sure to turn the power off. However, if you press the RELEASE button to detach the panel while the unit is still turned on, the power will be automatically turned off in order to protect the speakers from being damaged.
- Do not expose the front panel to direct sunlight, heat sources such as hot air ducts or leave it in a humid place. Never leave it on the dashboard etc. of a car parked in direct sunlight where there may be a considerable rise in temperature inside the car.

#### **Caution Alarm**

If you turn the ignition key to the OFF position without removing the front panel, the caution alarm will be activated and a beep tone will be heard for a few seconds (only when the POWER SELECT switch is set to the position).

#### **Setting the Clock**

The clock has a 12-hour digital indication.


For example, setting it to 10:08

- 1 Display the time.
  (Press the OFF) or the limit operation.)
- 2 Press the seconds. button for more than two seconds.




The hour digit blinks.

Set the hour digits.




3 Press the button momentarily.



The minute digit blinks.

Set the minute digits.



4 Press the sell button momentarily.



The clock activates.

#### Note

If the POWER SELECT switch on the bottom of the unit is set to the a position, the clock cannot be set unless the power is turned on. Set the clock after you have turned on the radio, or started CD playback.

ΕN

## **CD Player Operation**

#### **Playing a CD**


After inserting the CD, playback will start from the first track automatically.

Labeled side up



If an CD is already inserted, press the

**Elapsed playing time** 



#### When the last track on the CD is over.

the track number indication will return to "1", and the playback will restart from the first track of the CD.

#### Note

To play a 8 cm (3 in.) CD, use the optional Sony compact disc single adapter (CSA-8).

#### To stop playback,

eject the CD by pressing the <u>button</u> or press the <u>OFF</u> button.

Playback stops also when you select another source (radio) by pressing the button.

#### **Ejecting the CD**

Press the button.

#### Note

If you leave the ejected disc in the disc insertion slot after you have pressed the ≜ button, the disc will be automatically retracted into the unit after about 15 seconds in order to protect it.

# Locating the Beginnings of the Tracks

AMS (Automatic Music Sensor) Function

During playback, press either side of the AMS/SEEK button the number of times you wish to skip the tracks.



previous tracks



1 5

To locate the succeeding tracks

#### **Locating the Desired Part**

a Track — Manual Search Function

During playback, press and hold either side of the PRESET button. Release the button when you have found the desired part.





To reverse

To forward

If you reverse to the beginning of the track "LLL" appears on the display. Forwarding to the end of the track causes "¬¬¬" to be displayed.

In either case, you can neither proceed to the previous nor following track.

#### **Searching the Desired**

Track — Intro Scan Function

Press the ☐☐ button during playback.

→ "INTRO" appears on the display.

The first 10 seconds of all the tracks are played. When you find the desired track, press the button once more. The unit returns to the normal playback mode.

#### **Playing Tracks Repeatedly**

— Repeat Play Function

Press the 2 button during playback.

→ "REP" appears on the display.

When the currently played track is over, it will be played again from the beginning. To cancel this mode, press the button again.

# Playing Tracks in Random Order —Shuffle Play Function

Press the 3 button during playback.

→ "SHUF" appears on the display.

All tracks on the currently selected disc are played in random order. After each track has

been played once.

## Playing Tracks in Random

**Order** —Shuffle Play Function

Press the 3 button during playback.  $\rightarrow$  "SHUF" appears on the display.

All tracks on the currently selected disc are played in random order. After each track has been played once.

#### **Radio Reception**

# Searching for the Stations Automatically — Automatic Tuning

1 Select the desired band.




2 Press either side of the AMS/SEEK button to search for the station (automatic tuning).



The scanning stops when a station is received. Press either side of the AMS/SEEK button repeatedly until the desired station is received.

When an FM stereo program with a sufficient signal strength is tuned in,



the "STEREO" indication will appear.

To avoid the automatic tuning from stopping on stations too frequently (local seek mode), press the SENS button momentarily to get the "LCL" indication.

Only the stations with relatively strong signals can be tuned in. The local seek mode functions only when the automatic tuning is in operation.

If FM Stereo Reception is

Poor — Monaural Mode

Press the SENS button momentarily.

→ "MONO" appears on the display.

The sound will improve, but it will become monaural.

By pressing the SENS button, you can change the displayed items as follows:

→ LCL → MONO → Normal mode

CD Player Operation/Radio Reception

EN

#### Tuning in by Adjusting the Frequency — Manual Tuning

- 1 Select the desired band (page 7).
- 2 Press and hold either side of the PRESET

Release the button when the desired station is received





For lower frequencies

For higher frequencies

#### **PREVENTING ACCIDENTS!**

When tuning in during driving, use the automatic tuning and the preset search function instead of the manual tuning.

#### **Memorizing Stations Automatically**

— BTM (Best Tuning Memory) Function

This function selects from the currently received band the stations with the strongest signals and memorizes them in order of their frequency.

- 1 Select the desired band (page 7).
- 2 Press the BTM button for more than two seconds.
  - When there is no preset number indicated on the display window, stations will be stored on all preset number buttons on the currently selected band.
  - · When there is a preset number indicated on the display window, the unit will store stations on all preset number buttons from the one currently displayed.

For example, when you select FM1 and preset number 3 is displayed,

the operation will start from preset number 3 on FM1, and will stop at preset number 6 on FM3.

#### **Memorizing Only the** Desired Stations

- 1 Select the desired band (page 7).
- 2 Tune in the station which you wish to store on the preset number button.
- 3 Keep the desired preset number button ( to 6 ) pressed for about two seconds until you hear a beep tone.

The number of the pressed preset number button appears on the display window.

Up to 6 stations on each band (FM1, FM2, FM3 and AM) can be stored on the preset number buttons in order of your choice. Therefore, 18 stations can be memorized on FM. If you try to store another station on the same preset number button, the previously stored station will be

#### **Receiving the Memorized** Stations

- 1 Select the desired band (page 7).
- 2 Press momentarily the preset number button ( f ) to f) on which the desired station is stored.


#### Note

If you press the preset number button for more than two seconds, the currently received station will be memorized again. To receive the previously memorized station, make sure that the preset number button is pressed only momentarily

Press either side of the PRESET button momentarily to receive in order the stations stored in the memory (Preset Search Function).



Press momentarily



Press momentarily

 $1 \rightarrow 6 \rightarrow 5 \rightarrow 4 \rightarrow 3 \rightarrow 2 \rightarrow 1 \rightarrow \cdots$ 

#### Other Functions

#### **Adjusting the Sound** Characteristics

1 Select the item you want to adjust by pressing the button repeatedly.

VOL (volume)  $\rightarrow$  BAS (bass)  $\rightarrow$  TRE (treble)  $\rightarrow$  BAL (balance)  $\rightarrow$  FAD (fader) → VOL (volume)

2 Adjust the selected item by pressing the or \_\_\_\_ button.

Adjust within three seconds after selecting. (After three seconds the button will again serve as volume control button.)

#### **Enjoying Bass and Treble** even at Low Volume

Loudness Function

Press the LOUD button. → "LOUD" will appear on the display.

Bass and treble will be reinforced. To cancel, press again.

#### **Muting the Sound Quickly**

- Mute Function

Press the MUTE button. → The "MUTE" indication flashes.

The sound is muted at once. To restore the previous volume level, press again.

This function will be also cancelled when:

- the or OFF button is pressed.
- ejecting a CD by pressing the 📤 button during CD playback.

# Adjusting the Sound Characteristics

1 Select the item you want to adjust by pressing the button repeatedly.

VOL (volume)  $\rightarrow$  BAS (bass)  $\rightarrow$  TRE (treble)  $\rightarrow$  BAL (balance)  $\rightarrow$  FAD (fader)  $\rightarrow$  VOL (volume)

2 Adjust the selected item by pressing the or button.

Adjust within three seconds after selecting. (After three seconds the button will again serve as volume control button.)

# **Enjoying Bass and Treble even at Low Volume**

- Loudness Function

Press the [000] button.  $\rightarrow$  "LOUD" will appear on the display.

Bass and treble will be reinforced. To cancel, press again.

#### **Muting the Sound Quickly**

- Mute Function

Press the  $^{\text{MUTE}}$  button.  $\rightarrow$  The "MUTE" indication flashes.

The sound is muted at once. To restore the previous volume level, press again.

This function will be also cancelled when:

- the \_\_\_\_otoo or OFF button is pressed.
- ejecting a CD by pressing the button during CD playback.

#### **Muting the Beep Tone**

Press the 6 button while pressing the button.

To reobtain the beep tone, press these buttons again.

#### Maintenance

#### **Fuse Replacement**


When replacing the fuse, be sure to use one with the correct amperage which is stated on the fuse case. Never use a fuse whose amperage rating exceeds the one supplied to the unit as this could cause a malfunction of the unit.

#### Warning

Use a fuse with the specified amperage. Use of a fuse with higher amperage may cause serious damage.

#### **Cleaning the Connectors**

The unit may not function properly if the connectors between the unit and the front panel are not clean. In order to prevent this, open the front panel by pressing the RELEASE button, then detach it and clean with a cotton swab which was dipped in alcohol. Do not apply too mach force. Otherwise, the connector may get damaged.




EN

Radio Reseption/Other Functions

#### **Dismounting the Unit**

1



2



3



4



# The Rotary Commander Labels

This unit can be used with the separately available optional the rotary commander (RM-X2S).

Four button name labels are supplied with the rotary commander. Attach that label which matches the functions of the master unit and the installing position of the rotary commander.


In case you connect this unit, attach the label which has "DSPL" on it.





Attach the appropriate label for the installing position of the rotary commander.


#### **Location of Controls**

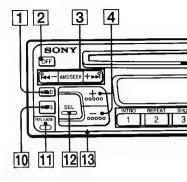

Refer to the pages in ● for details.

- 1 LOUD (loudness) button 9
- 2 OFF button **4969**
- 3 AMS/SEEK (Automatic Music Sensor/automatic tuning) button **97**
- 4 (volume/bass/treble/balance/fader control) button **50**
- 5 Display window
- 6 (radio on/band select) button
- 7 PRESET (preset search) button 68
- 8 **△** (eject) button **69**
- 9 SENS (sensitivity adjust) button •
- 10 MUTE button 9
- RELEASE (front panel release) button 459
- 12 SEL (control mode select) button 69
- 13 Reset button (located on the front side of the unit hidden by the front panel) 4

#### **Location of Controls**

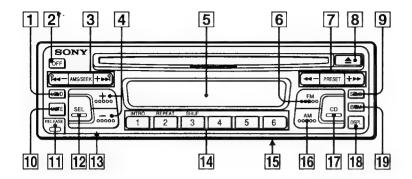

Refer to the pages in • for details.

- 1 LOUD (loudness) button 9
- 2 Off button **4669**
- 3 AMS/SEEK (Automatic Music Sensor/automatic tuning) button 60
- 4 (volume/bass/treble/balance/fader control) button 69
- 5 Display window
- 6 (radio on/band select) button
- 7 PRESET (preset search) button 68
- 9 SENS (sensitivity adjust) button 0
- 10 MUTE button 9
- RELEASE (front panel release) button
- 12 SEL (control mode select) button 69
- Reset button (located on the front side of the unit hidden by the front panel) 4

14 During radio reception:
Preset number buttons 3

#### **During CD playback:**

- INTRO (intro scan) button 6
- REPEAT (repeat play) button 6
- SHUF (shuffle play) button @
- 15 POWER SELECT switch (located on the bottom of the unit)
  See "POWER SELECT Switch" in the installation/Connections manual.
- 16 (radio on/band select) button 60
- 17 CD (CD play) button 6
- 18 DSPL (display mode change/time set) button 6
- 19 BTM (Best Tuning Memory function) button 3

EN

#### **Specifications**

#### **AUDIO POWER SPECIFICATIONS**

POWER OUTPUT AND TOTAL HARMONIC DISTORTION 7 watts per channel minimum continuous average power into 4 ohms, 4 channels driven from 20 Hz to 20 kHz with no more than 1 % total harmonic distortion.

#### Other Specifications

CD player section	n
System	Compact disc digital audio system
Signal-to- noise ratio	90 dB
Frequency response	10 - 20,000  Hz
Wow and flutter	Below measurable limit
Laser Diode Properties	
Material	GaAIAs
Wavelength	780 nm
Emission Duration	Continuous
Laser output power	Less than 44.6 µW*
*This output is the value	e measured at a distance of
	ctive lens surface on the

<b>Tuner section</b>		
FM		M
Tuning range	87.5 - 107.9 MHz	Sı
Antenna terminal	External antenna connector	-
Intermediate frequency	10.7 MHz	
Usable sensitivity	≅ dBf	0
Selectivity	75 dB at 400 kHz	
Signal-to-noise ratio	65 dB (stereo),	
3	68 dB (mono)	
Harmonic distortion at 1	kHz	
	0.5 % (stereo),	
	0.3 % (mono)	
Separation	35 dB at 1 kHz	
Frequency response	30 - 15,000 Hz	
Capture ratio	2 dB	

#### AM

I uning range	
Antenna terminal	
Intermediate frequency	
Sensitivity	

530 – 1,710 kHz

External antenna connector 10.71 MHz/450 kHz

 $30\,\mu\text{V}$ 

#### **Power amplifier section**

Outputs	Speaker outputs
•	(sure seal connectors)
Speaker impedance	4-8 ohms
Maximum power output	20 W × 4 (at 4 ohms)

#### General

General	
Output lead	Power amplifier control lead
Tone controls	Bass ±8 dB at 100 Hz
D	Treble ±8 dB at 10 kHz
Power requirements	12 V DC car battery
Dimensions	(negative ground) Approx. $188 \times 50 \times 177$ mm
Officialous	$(7^{1}/_{2}\times2\times7 \text{ in.})$
	(w/h/d) not incl.
	projecting parts and
	controls
Mounting dimension	Approx. 178 × 50 × 154 mm
	$(7^{1}/8 \times 2 \times 6^{1}/8 \text{ in.})$
	(w/h/d) not incl.
	projecting parts and
	controls
Mass	Approx. 1.5 kg (3 lb 5 oz.)
Supplied accessories	Power connecting cord (1)
	Mounting hardware (1 set)
	Front panel case (1)
Optional accessories	Rotary commander
	RM-X2S
	RCA pin cord
	RC-63 (1 m), RC-64 (2 m),
	RC-65 (5 m)
	Cleaning cloth XP-CD1
	Compact disc single
	adapter CSA-8

Design and specifications are subject to change without notice.

#### **Troubleshooting Guide**

The following check will assist in the correction of your unit.

Before going through the check list below, refer to

Cause/Soluti

#### General Problem

<ul> <li>Adjust the vo</li> <li>Set the fader system.</li> </ul>
• The power co • the reset butt → Store agai
Remove the fro
When the AMI the antenna wi

CD playback	
Problem	Cause/Soluti
A CD cannot be loaded.	<ul><li>Another CD</li><li>The CD is foround</li></ul>
Play does not begin.	Dusty disc.
A CD is automatically ejected.	The ambient t
The operation buttons do not function.	Press the rese
The sound skips due to vibration.	• The unit is it • The unit is r

#### **Radio reception**

Problem	Cause/Solu
Preset tuning is not possible.	Memorize t     The broadc
Automatic tuning is not possible.	The broadcas  → Use the m
The "STEREO" indication flashes.	• Tune in pre • The broadc → Press th

#### **Troubleshooting Guide**

The following check will assist in the correction of most problems which you may encounter with your unit.

Before going through the check list below, refer to the connection and operating procedures.

#### General

Problem	Cause/Solution
No sound	<ul> <li>Adjust the volume with the button.</li> <li>Set the fader control to the center position on the 2-speaker system.</li> </ul>
The contents of the memory has been erased.	<ul> <li>The power cord or battery has been disconnected.</li> <li>the reset button has been pressed.</li> <li>→ Store again into the memory.</li> </ul>
Indications do not appear on the display window.	Remove the front panel and clean the connectors. See "Cleaning the Connectors" of "Maintenance" for details.
Antenna does not retract.	When the AMP REM lead is connected to the power antenna, the antenna will be extended as long as the unit is turned on.

#### CD playback

Problem	Cause/Solution
A CD cannot be loaded.	<ul> <li>Another CD is already loaded.</li> <li>The CD is forcibly inserted upside down or the wrong way round</li> </ul>
Play does not begin.	Dusty disc.
A CD is automatically ejected.	The ambient temperature is more than 50°C.
The operation buttons do not function.	Press the reset button.
The sound skips due to vibration.	<ul> <li>The unit is installed at an angle of more than 20°.</li> <li>The unit is not installed to a sturdy part of the car.</li> </ul>

#### Radio reception

Tadio reception	
Problem	Cause/Solution
Preset tuning is not possible.	<ul><li>Memorize the correct frequency.</li><li>The broadcast is too weak.</li></ul>
Automatic tuning is not possible.	The broadcast is too weak.  → Use the manual tuning.
The "STEREO" indication flashes.	<ul> <li>Tune in precisely.</li> <li>The broadcast is too weak.</li> <li>→ Press the SENS button to enter the MONO mode.</li> </ul>

**Error displays**The following indications will flash for about five seconds and an alarm sound will be heard.

Display	Cause	Solution
E - 04	CD is dirty or inserted upside down.	Clean or insert the CD correctly.
E - 99	The CD player cannot be operated because of some problem.	Press the reset button of the unit.

#### **Caractéristiques**

#### Généralités

- Vous pouvez emporter la façade détachable quand vous quittez votre véhicule (page 4).
- Ûn avertisseur retentit si vous tournez la clé de contact sans avoir préalablement enlevé la façade de l'appareil.
- L'amplificateur intégré (puissance admissible: 20 W × 4 ca) permet de relier un système de 4 haut-parleurs.

#### **Section lecteur CD**

- Un convertisseur numérique-analogique de 1 bit rend plus claire la reproduction du son.
- Mécanisme de reprise rapide de la lecture pour éviter les sautes de son.
- Fonctions pratiques habituelles comme lecture des intros pour rechercher une plage, répétition pour écouter plusieurs fois une plage et lecture aléatoire pour écouter les plages d'un disque dans un ordre quelconque.

#### **Section tuner**

- Possibilité de présélectionner jusqu'à 24 stations: 18 en FM et 6 AM.
- Fonction BTM (Best Tuning Memory) qui sert à sélectionner automatiquement les stations les plus puissantes et à les mémoriser sous les touches de présélection dans l'ordre des fréquences (page 8).

#### Satellite de commande en option

Possibilité d'utiliser le satellite de commande (RM-X2S) manœuvrable comme la commande des essuie-glaces ou des phares pendant la conduite.



#### Table des matières

	Retrait et pose de la façade	
	Réglage de l'horloge	
,		u din
	Fonctionnement du lecteur	
	CD / / ///	
	Lecture d'un CD	
	Ejection du CD	
	Recherche des débuts de plage	
	Fonction AMS (Automatic Music	
	Sensor)	
	Localisation d'un passage sur une plage	
	— Fonction de recherche manuelle	
	Recherche d'une plage	
	— Fonction d'écoute des intros	••••
	Répétition	
	Lecture répétée des plages	
	Lecture des plages dans un ordre aléatoire	
	Fonction de lecture aléatoire	

#### Réception radio

Recherche automatique des stations

Accord automatique	
Si la réception FM stéréo n'est pas bonne	
— Réception mono	. 8
Accord par réglage de la fréquence	
— Accord manuel	. 8
Mémorisation automatique des stations	
<ul> <li>Fonction BTM (Best Tuning Memory,</li> </ul>	
Mémorisation du meilleur accord)	. 8

Mémorisation de stations particulières ......8
Réception des stations mémorisées ......9

#### Table des matières

Précautions
Retrait et pose de la façade
Réglage de l'horloge
•

#### Fonctionnement du lecteur de CD

Lecture d'un CD	
Ejection du CD	6
Recherche des débuts de plage  — Fonction AMS (Automatic Music Sensor)	
Localisation d'un passage sur une plage — Fonction de recherche manuelle	<del>6</del>
Recherche d'une plage — Fonction d'écoute des intros	<del>6</del>
Répétition — Lecture répétée des plages	7
Lecture des plages dans un ordre aléatoire  — Fonction de lecture aléatoire	

#### Réception radio

Recherche automatique des stations  — Accord automatique	-
Si la réception FM stéréo n'est pas bonne  — Réception mono	
Accord par réglage de la fréquence  — Accord manuel	
Mémorisation automatique des stations  — Fonction BTM (Best Tuning Memory, Mémorisation du meilleur accord)	
Mémorisation de stations particulières	. {
Réception des stations mémorisées	

#### **Autres fonctions**

Réglage du son9
Pour obtenir un son équilibré même à faible niveau
— Correction physiologique9
Coupure rapide du son
— Fonction sourdine9
Coupure des bips sonores10
Entretien10
Retrait de l'appareil10
Etiquettes pour le satellite de commande11
Nomenclature des touches12
Spécifications13
Guide de dépannage14

E .

#### **Précautions**

 Avant la mise en service de l'appareil ou après avoir remplacé la batterie de la voiture, appuyez sur la touche de réinitialisation avec un stylo à bille ou un objet pointu, puis allumez l'appareil.



#### Bouton de réinitialisation

- Si vous avez garé votre voiture en plein soleil et que la température à l'intérieur a considérablement augmenté, attendez que l'appareil se refroidisse avant de vous en servir.
- Si l'alimentation électrique n'arrive pas à l'appareil, vérifiez d'abord les connexions. Si elles sont correctes, vérifiez le fusible.
- Si aucun son ne sort des deux haut-parleurs, réglez le fader (balance avant-arrière) sur la position centrale.

Pour toute question ou problème au sujet de cet appareil, dont vous ne trouveriez pas l'explication dans ce mode d'emploi, consultez votre revendeur Sony.

#### Remarques sur les CD



Un disque sale ou défectueux peut provoquer des pertes de son à la lecture. Manipulez le disque comme décrit ci-dessous pour obtenir un son optimal.

Tenez le disque par son arête et ne touchez pas la surface.



Ne collez pas de papier ni de ruban adhésif sur la surface imprimée.



Ne laissez pas les disques en plein soleil ou près d'une source de chaleur comme un conduit d'air chaud, ni dans une voiture garée en plein soleil car la température de l'habitacle risque d'augmenter considérablement.



Avant la lecture, essuyez les disques avec un chiffon de nettoyage en option. Essuyez chaque disque du centre vers la circonférence. N'utilisez pas de solvants tels que de la benzine, du diluant, des produits de nettoyage vendus dans le commerce ou des vaporisateurs anti.

#### Remarque sur la condensation d'humidité


Les jours de pluie ou dans les régions très humides, de la condensation risque de se déposer sur les lentilles du lecteur CD et l'appareil ne fonctionne pas normalement. Dans ce cas, vous devez enlever le disque et attendre environ une heure que l'humidité se soit évaporée.

# Retrait et pose de la façade

Vous pouvez détacher la façade afin d'éviter que l'appareil ne soit volé.

#### Retrait de la façade


Avant de détacher la façade, appuyez sur la touche OFF. Appuyez ensuite sur la touche RELEASE pour ouvrir la façade. Enlevez-la en la tirant vers vous, comme indiqué sur l'illustration.

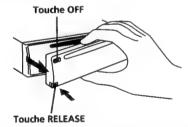

Veillez à ne pas laisser tomber la façade quand vous la détachez de l'appareil.

#### Pose de la façade

Appliquez la partie droite de la façade sur l'appareil et fixez la partie (a) de la façade sur la partie (b) de l'appareil, comme indiqué sur l'illustration, puis poussez de manière à l'enclencher.

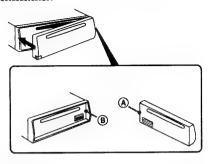

#### Remarque


- Vérifiez que la façade est dans le bon sens avant de la fixer, car elle ne peut pas être fixée dans l'autre sens.
- Ne forcez pas pour fixer la façade sur l'appareil.Une légère pression est suffisante.
- Rangez la façade dans son étui pour la transporter.
- N'appuyez pas avec force sul l'afficheur de la façade.
- Mettez l'appareil hors tension avant de retirer la façade. Cependant, si vous appuyez sur la touche RELEASE quand l'appareil est sous tension, il se met automatiquement hors tension pour protéger les hautparleurs.
- Ne laissez pas la façade en plein soleil, près de sources de chaleur comme des conduits d'air chaud ou dans un endroit humide. Ne la laissez jamais sur le tableau de bord, etc. d'une voiture garée en plein soleil, car la température risque d'augmenter considérablement.

#### **Avertisseur**

Si vous mettez la clé de contact du véhicule sur la position OFF (arrêt) sans enlever la façade, l'avertisseur se déclenche et émet un bip pendant quelques secondes. (Uniquement si l'interrupteur POWER SELECT est commuté sur (A).)

#### Pose de la façade

Appliquez la partie droite de la façade sur l'appareil et fixez la partie (A) de la façade sur la partie (B) de l'appareil, comme indiqué sur l'illustration, puis poussez de manière à l'enclencher.

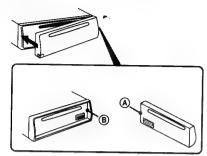

#### Remarques

- Vérifiez que la façade est dans le bon sens avant de la fixer, car elle ne peut pas être fixée dans l'autre sens.
- Ne forcez pas pour fixer la façade sur l'appareil. Une légère pression est suffisante.
- Rangez la façade dans son étui pour la transporter.
- N'appuyez pas avec force sul l'afficheur de la façade.
- Mettez l'appareil hors tension avant de retirer la façade. Cependant, si vous appuyez sur la touche RELEASE quand l'appareil est sous tension, il se met automatiquement hors tension pour protéger les hautparleurs.
- Ne laissez pas la façade en plein soleil, près de sources de chaleur comme des conduits d'air chaud ou dans un endroit humide. Ne la laissez jamais sur le tableau de bord, etc. d'une voiture garée en plein soleil, car la température risque d'augmenter considérablement.

#### **Avertisseur**

Si vous mettez la clé de contact du véhicule sur la position OFF (arrêt) sans enlever la façade, l'avertisseur se déclenche et émet un bip pendant quelques secondes. (Uniquement si l'interrupteur POWER SELECT est commuté sur (a.)

#### Réglage de l'horloge

L'horloge fonctionne sur 12 heures.


Par exemple, réglez l'heure sur 10:08.

- 1 Affichez l'heure.

  (Appuyez sur OFF ou sur QUEPL pendant que l'appareil est allumé.)
- 2 Appuyez sur pendant plus de deux secondes.




Réglez l'heure.



3 Appuyez brièvement sur la touche



Réglez les minutes.



4 Appuyez brièvement sur la touche OSPL.



Remarque

Quand l'interrupteur POWER SELECT sous l'appareil est réglé sur la position , vous ne pouvez pas régler l'horloge si l'appareil est éteint. Allumez la radio ou démarrez la lecture d'un CD avant de régler l'horloge.

#### Fonctionnement du lecteur de CD

#### Lecture d'un CD


Introduisez un CD, la lecture commence automatiquement à partir de la première plage.

Face imprimée vers le haut



S'il y a déjà un CD, appuyez sur gour entamer la lecture.

Temps de lecture écoulé



## Quand la dernière plage du CD est terminée,

L'indication du numéro de plage revient sur "1" et la lecture reprend à partir de la première plage du CD.

#### Remarque

Pour écouter un disque de 8 cm (3 po.), utilisez l'adaptateur Sony CSA-8 (non fourni).

#### Pour arrêter la lecture,

appuyez sur <u>a</u> ou <u>OFF</u>, le CD est éjecté. La lecture s'arrête également si vous choisissez une autre source (radio) en appuyant sur



#### **Ejection du CD**

Appuyez sur 📤 .

#### Remarque

Si vous laissez le disque éjecté dans la fente après avoir appuyé sur la touche 📤, il est automatiquement réintroduit dans l'appareil au bout de 15 secondes environ par mesure de protection.

# Recherche des débuts de plage

— Fonction AMS (Automatic Music Sensor)

Pendant la lecture, appuyez sur un côté ou l'autre de la touche AMS/SEEK un nombre de fois égal à celui de plages que vous voulez sauter.





Pour aller vers les plages précédentes

Pour aller vers les plages suivantes

# Localisation d'un passage sur une plage

- Fonction de recherche manuelle

Pendant la lecture, pressez et maintenez enfoncé l'un ou l'autre côté de la touche PRESET. Relâchez cette touche dès que vous avez trouvé le passage voulu.





Pour reculer Pour

Si vous revenez au début de la plage, l'indication
"LLLL" apparaît sur l'afficheur. Si vous avancez
jusqu'à la fin de la plage, l'indication "¬¬¬¬"
s'affichera.

Dans un cas comme dans l'autre, vous ne pouvez passer à la plage précédente ou à la plage suivante.

#### Recherche d'une plage

Fonction d'écoute des intros

Appuyez sur la touche Temperature la lecture. — "INTRO" apparaît à l'affichage.

Les dix premières secondes de toutes les plages sont lues. Lorsque vous avez trouvé la plage que vous cherchez, appuyez sur la touche une nouvelle fois pour revenir à la lecture normale.

#### Répétition

— Lecture répétée des plages

Appuyez sur la touche 2 pendant la lecture. → "REP" apparaît à l'affichage.

A la fin de la plage écoutée, celle-ci sera répétée depuis son début.

Pour annuler la fonction, appuyez à nouveau sur la touche.

#### Lecture des plages dans un ordre aléatoire

- Fonction de lecture aléatoire

Appuyez sur la touche 3 pendant la lecture. 

"SHUF" apparaît à l'affichage.

Toutes les plages du disque sélectionné sont reproduites dans un ordre aléatoire. Chaque plage est reproduite une fois.

#### Répétition

- Lecture répétée des plages

Appuyez sur la touche 2 pendant la lecture. → "REP" apparaît à l'affichage.

A la fin de la plage écoutée, celle-ci sera répétée depuis son début.

Pour annuler la fonction, appuyez à nouveau sur la touche.

#### Lecture des plages dans un ordre aléatoire

- Fonction de lecture aléatoire


Appuyez sur la touche 3 pendant la lecture. → "SHUF" apparaît à l'affichage.

Toutes les plages du disque sélectionné sont reproduites dans un ordre aléatoire. Chaque plage est reproduite une fois.

#### Réception radio

#### Recherche automatique des stations

- Accord automatique
- Choisissez la gamme d'ondes voulue.



2 Appuyez sur l'un des côtés de la touche AMS/SEEK pour chercher la station (accord automatique).




Pour descendre de fréquence

Pour monter de fréquence

L'exploration s'arrête lorsque l'accord se fait sur une station. Appuyez à nouveau sur la touche AMS/SEEK jusqu'à ce que vous obteniez la station que vous cherchez.

Si une émission FM avec un signal suffisamment puissant a été syntonisée,



l'indication "STEREO" apparaît.

Pour éviter que l'accord automatique s'arrête sur des stations trop faibles (recherche locale), appuyez brièvement sur SENS) pour obtenir l'indication "LCL".

Seules les stations dont le signal est suffisamment intense seront accordées. Le mode "local" ne fonctionne qu'avec l'accord automatique.

Fonctionnement du lecteur de CD/Réception radio

# Si la réception FM stéréo n'est pas bonne


- Réception mono

Appuyez sur SENS pendant la lecture.

→ "MONO" apparaît à l'affichage.

La diffusion sonore comporte moins de souffle mais elle est en mono.

En appuyant sur la touche (SENS), vous pouvez changer les paramètres affichés selon la séquence suivante:



# Accord par réglage de la fréquence — Accord manuel

- 1 Choisissez la gamme d'ondes voulue (page 7).
- 2 Appuyez sur l'un des côtés de la touche PRESET et maintenez-le enfoncé. Lâchez la touche quand la station désirée est atteinte.





Vers les fréquences inférieures Vers les fréquences supérieures

#### **EVITEZ LES ACCIDENTS**

Quand vous conduisez, utilisez l'accord automatique ou la fonction de recherche de présélections (page 9) plutôt que l'accord manuel.

# Mémorisation automatique des stations

 Fonction BTM (Best Tuning Memory, Mémorisation du meilleur accord)

Cette fonction sert à mémoriser dans l'ordre des fréquences les stations dont le signal est puissant.

 Choisissez la gamme d'ondes voulue (page 7).

- 2 Appuyez sur mm pendant plus de deux secondes
  - S'il n'y a pas de numéro de présélection affiché, les stations seront mémorisées sous tous les numéros disponibles pour la gamme d'ondes.
  - S'il y a un numéro de présélection affiché, l'appareil mémorise les stations sous tous les numéros disponibles à partir de celui indiqué.

Par exemple, si vous choisissez FM1 et que la présélection 3 est affichée,

la mémorisation commence au numéro 3 de FM1 et s'arrêtera au numéro 6 de FM3.

# Mémorisation de stations particulières

- 1 Choisissez la gamme d'ondes voulue (page 7).
- 2 Accordez la station que vous voulez mémoriser sous un numéro de présélection.
- 3 Appuyez sur la touche de numéro de présélection ( 1 à 6 ) pendant environ deux secondes jusqu'à ce que vous entendiez un bip.

Le numéro de la présélection apparaît à la fenêtre d'affichage.

Six stations peuvent être mémorisées sous des touches de présélection dans chaque gamme d'ondes (FM1, FM2, FM3 et AM) dans l'ordre que vous voulez. Ainsi, vous disposez de 18 présélections FM.

Si vous mémorisez une station sous le même numéro qu'une autre présélection, la présélection précédente sera effacée.


#### Réception des stations mémorisées

- 1 Choisissez la gamme d'ondes voulue (page 7).
- 2 Appuyez brièvement sur la touche du numéro ( î à 6 ) sous lequel est mémorisée la station que vous voulez écouter.

#### Remarque

Si vous appuyez sur la touche du numéro de présélection pendant plus de deux secondes, la station sera remémorisée. Pour recevoir la station mémorisée précédemment, veillez à ne pas appuyer trop longtemps sur la touche.

Appuyez brièvement sur l'un des côtés de la touche PRESET pour recevoir les stations dans l'ordre de la présélection (fonction de recherche de présélections).



 $1 \rightarrow 6 \rightarrow 5 \rightarrow 4 \rightarrow 3 \rightarrow 2 \rightarrow 1 \rightarrow \cdots$ 

- 1 Choisissez la gamme d'ondes voulue (page 7).
- 2 Appuyez brièvement sur la touche du numéro ( î à 6 ) sous lequel est mémorisée la station que vous voulez écouter.

Remarque

la

Si vous appuyez sur la touche du numéro de présélection pendant plus de deux secondes, la station sera remémorisée. Pour recevoir la station mémorisée précédemment, veillez à ne pas appuyer trop longtemps sur la touche.

Appuyez brièvement sur l'un des côtés de la touche PRESET pour recevoir les stations dans l'ordre de la présélection (fonction de recherche de présélections).



Appuyez brièvement



Appuyez brièvement

 $1 \longrightarrow 6 \longrightarrow 5 \longrightarrow 4 \longrightarrow 3 \longrightarrow 2 \longrightarrow 1 \longrightarrow \cdots$ 

#### **Autres fonctions**

#### Réglage du son

1 Choisissez le paramètre que vous voulez régler en appuyant plusieurs fois sur sur

VOL (volume)  $\rightarrow$  BAS (grave)  $\rightarrow$  TRE (aigu)  $\rightarrow$  BAL (balance)  $\rightarrow$  FAD (fader)  $\rightarrow$  VOL (volume)

2 Réglez le paramètre en appuyant sur ou ....................

Faites le réglage dans les trois secondes de la sélection. (Après trois secondes, la touche servira à nouveau au réglage du volume.)

# Pour obtenir un son équilibré même à faible

**niveau** — Correction physiologique

Appuyez sur [1000]. → "LOUD" apparaît à l'affichage.

Le grave et l'aigu sont renforcés. Pour annuler, appuyez à nouveau sur la touche.

#### Coupure rapide du son

— Fonction sourdine

Appuyez sur  $[uve] . \rightarrow "MUTE"$  apparaît à l'affichage.

Le son est coupé immédiatement. Pour le rétablir, appuyez à nouveau sur la touche.

#### Cette fonction est également annulée lorsque:

- vous appuyez sur 📆 ou OFF.
- vous commandez l'éjection du disque avec la touche pendant la lecture.

F

Réception radio/Autres fonctions

#### **Coupure des bips sonores**

### Appuyez sur $\boxed{6}$ tout en appuyant sur $\boxed{5}$ .

Pour rétablir le bip, appuyez à nouveau sur ces touches.

#### **Entretien**

#### Remplacement du fusible


Si vous devez remplacer le fusible, veillez à respecter l'ampérage inscrit sur le portefusible. N'utilisez jamais de fusible d'un ampérage supérieur à celui fourni avec l'appareil; le risque est réel.


#### **Avertissement**

Utilisez un fusible de l'ampérage spécifié. L'utilisation d'un fusible d'ampérage supérieur peut causer de sérieux dommages.

#### Nettoyage des connecteurs

Si les connecteurs entre l'appareil et la façade sont pas propres, il peut arriver que le système ne fonctionne pas bien. Pour éviter cela, ouvrez la façade en poussant sur la touche RELEASE, déposez-le ensuite et nettoyez-le à l'aide d'un Coton-tige imprégné d'alcool. N'exercez pas une pression trop importante. Vous risqueriez sinon d'endommager le connecteur.





Dos de la façade

#### Retrait de l'appareil

1



2



3



4



# **Etiquettes pour le satellite de commande**

Cet appareil peut être utilisé avec le satellite de commande (RM-X2S) optionnel disponible séparément.

Quatre étiquettes d'identification de touche sont fournies avec le satellite de commande. Apposez les étiquettes correspondant aux fonctions de l'appareil principal raccordé et à la position de montage du satellite de commande.

Dans le cas où vous raccordez cet appareil, apposez dessus l'étiquette portant l'inscription "DSPL".





Apposez l'étiquette correspondant à la position de montage du satellite de commande.

# **Etiquettes pour le satellite de commande**


Cet appareil peut être utilisé avec le satellite de commande (RM-X2S) optionnel disponible séparément.

séparément.

Quatre étiquettes d'identification de touche sont fournies avec le satellite de commande. Apposez les étiquettes correspondant aux fonctions de l'appareil principal raccordé et à la position de montage du satellite de commande.


Dans la cas où vous raccorder cet appareil

Dans le cas où vous raccordez cet appareil, apposez dessus l'étiquette portant l'inscription "DSPL".

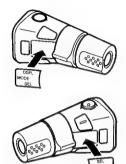

Apposez l'étiquette correspondant à la position de montage du satellite de commande.

F Autres fonctions

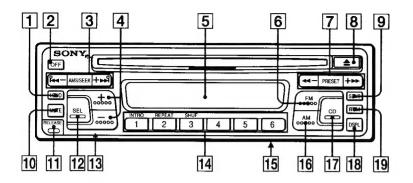

Voyez les pages ● pour les détails.

- 1 Touche LOUD (correction physiologigue)
  9
- 2 Touche OFF **4669**
- ③ Touche AMS/SEEK (fonction de détection automatique du début des plages/accord automatique) ⑥ ⑦ ⑨
- 4 Touche (volume/grave/aigu/balance/fader) **6**9
- 5 Fenêtre d'affichage
- 6 Touche (radio enclenchée/ sélection de gamme d'ondes) 67
- 7 Touche PRESET (sélecteur de présélection) 639
- 8 Touche d'éjection **▲ 6**9
- 9 Touche SENS (réglage de la sensibilité)
- 10 Touche MUTE (coupure son) 9
- 11 Touche RELEASE (pour enlever la façade) 460
- 12 Touche SEL (sélection du mode de commande) **590**
- 13 Touche de réinitialisation (à l'avant de l'appareil, cachée par le panneau avant)

14 Pendant la réception radio: Touches des numéros de présélection 30

Pendant la lecture CD:

Touche INTRO (balayage des intros) 6

Touche 2 REPEAT (lecture répétée)

Touche 3 SHUF (lecture aléatoire)

15 Interrupteur d'alimentation (POWER SELECT) (sous l'appareil)

Voir sous "Interrupteur POWER SELECT" dans le manuel d'installation/connexions.

- 16 Touche (radio enclenchée/ sélection de gamme dóndes) 60
- 17 Touche CD (lecture disque) 6
- Touche DSPL (changement d'affichage/ réglage de l'horloge) 6
- Touche BTM (mémorisation du meilleur accord) 6

#### **Spécifications**

#### Section lecteur de CD

Système Système audionumérique

de disque compact

Rapport signal/bruit 90 dB

Réponse en fréquence 10 à 20.000 Hz Pleurage et scintillement Inférieurs à la limite

mesurable

#### **Section tuner**

FΜ

Plage d'accord 87,5 – 107,9 MHz

Entrée antenne Connecteur pour antenne

extérieure Fréquence intermédiaire 10,7 MHz

Sensibilité utile 8 dBf

Sélectivité 75 dB à 400 kHz Rapport signal/bruit 65 dB (stéréo), 68 dB (mono)

Distorsion harmonique à 1 kHz

0,5 % (stéréo), 0,3 % (mono)

Séparation 35 dB à 1 kHz Réponse en fréquence 30 – 15.000 Hz

Taux de capture 2 dB

AM

Plage d'accord 530 – 1.710 kHz

Entrée antenne Connecteur pour antenne

extérieure

Fréquence intermédiaire 10,71 MHz/450 kHz

Sensibilité: 30 µV

#### Section amplificateur de puissance

Sorties Haut-parleurs (connecteurs

de sécurité)

Impédance des haut-parleurs

4 – 8 ohms

Puissance maximum  $20 \text{ W} \times 4 \text{ (sur 4 ohms)}$ 

#### **Spécifications**

#### Section lecteur de CD

Système

Système audionumérique

de disque compact

Rapport signal/bruit Réponse en fréquence Pleurage et scintillement

90 dB 10 à 20.000 Hz Inférieurs à la limite

mesurable

#### **Section tuner**

Plage d'accord

87,5 - 107,9 MHz

Entrée antenne

Connecteur pour antenne extérieure

Fréquence intermédiaire Sensibilité utile

10,7 MHz 8 dBf

Sélectivité Rapport signal/bruit 75 dB à 400 kHz 65 dB (stéréo), 68 dB (mono)

Distorsion harmonique à 1 kHz

0,5 % (stéréo), 0,3 % (mono) 35 dBà 1 kHz 30 - 15.000 Hz

Réponse en fréquence Taux de capture

ΑM

Plage d'accord

Séparation

530 - 1.710 kHz

Entrée antenne

Connecteur pour antenne

Fréquence intermédiaire

extérieure 10,71 MHz/450 kHz

Sensibilité:

 $30 \mu V$ 

#### Section amplificateur de puissance

Sorties

Haut-parleurs (connecteurs

de sécurité)

Impédance des haut-parleurs 4 - 8 ohms

Puissance maximum

20 W × 4 (sur 4 ohms)

#### Généralités

Fil de sortie

Dimensions

Poids

Fil de commande d'amplificateur

Réglages de tonalité

Accessoires fournis

Accessoires en option

Graves: ± 8 dB à 100 Hz Aiguës: ± 8 dB à 10 kHz

Batterie de voiture 12 V Alimentation (masse négative) env. 188 × 50 × 177 mm

 $(7^{1}/_{2} \times 2 \times 7 \text{ po.}) (1/h/p)$ parties saillantes et

commandes non comprises env. 178 × 50 × 154 mm Dimensions de montage

 $(7^{1}/8 \times 2 \times 6^{1}/8 \text{ po.})$ 

(1/h/p)

parties saillantes et commandes non comprises

env. 1,5 kg (3 liv. 5 on.) Cordon d'alimentation (1)

Matériel de montage (1 jeu)

Etui pour la façade (1) Satellite de commande

RM-X2S

Cordon à fiches RCA RC-63 (1 m), RC-64 (2 m),

RC-65 (5 m)

Chiffon de nettoyage XP-CD1

Adaptateur pour disques single CSA-8

Conception et spécifications modifiables sans préavis.

#### Guide de dépannage

Les vérifications suivantes vous aideront à résoudre la plupart des problèmes que vous pourriez

rencontrer avec cet appareil.

Avant de parcourir la liste suivante, consultez à nouveau les procédures de branchement et de fonctionnement.

#### Généralités

Problème	Cause/solution
Pas de son	<ul> <li>Réglez le volume en appuyant sur la touche</li> <li>Si vous avez une installation à deux haut-parleurs, réglez le fader sur la position centrale.</li> </ul>
Les données de la mémoire ont été effacées.	<ul> <li>Le cordon d'alimentation ou la batterie a été débranché.</li> <li>Vous avez appuyé sur la touche de réinitialisation.</li> <li>→ Mémorisez à nouveau les données.</li> </ul>
Pas d'affichage dans la fenêtre.	Enlevez la façade et nettoyez les contacts. Voyez "Nettoyage des connecteurs" de la section "Entretien".
L'antenne ne se rétracte pas.	Si le fil d'AMP REM est raccordé à l'antenne électrique, l'antenne restera déployée aussi longtemps que l'appareil sera sous tension.

#### Lecture de CD

us avez déjà inséré un CD. us avez inséré le CD à l'envers en forçant.
ue poussiéreux
empérature ambiante dépasse 50°C.
uyez sur la touche de réinitialisation.
surface où est posée l'appareil est inclinée à plus de 20°. ppareil n'est pas posé sur une surface stable dans la voiture.

#### Réception radio

Problème	Cause/solution ·
Impossible de faire une présélection	<ul><li> Mémorisez la fréquence correcte.</li><li> L'émission est trop faible.</li></ul>
Accord automatique impossible	L'émission est trop faible; → faites l'accord manuellement.
L'indication "STEREO" clignote	<ul> <li>Accordez la station avec plus de précision.</li> <li>L'émission est trop faible; → appuyez sur SENS pour passer en MONO.</li> </ul>

#### 14

#### Affichage d'erreurs

Les indications suivantes clignotent pendant envir

Affichage	Cause
E - 04	Le CD est souillé ou a été inse l'envers.
E - 99	Le lecteur CD ne fonctionne p cause d'un problème quelcor

Si les solutions ci-dessus ne vous aident pas à réso

#### Affichage d'erreurs

Les indications suivantes clignotent pendant environ cinq secondes et une alarme retentit.

Affichage	Cause	Solution
E-04	Le CD est souillé ou a été inséré à l'envers.	Nettoyez ou insérez le CD correctement.
E - 99	Le lecteur CD ne fonctionne pas à cause d'un problème quelconque.	Poussez sur le bouton de réinitialisation.

Si les solutions ci-dessus ne vous aident pas à résoudre le problème, consultez votre revendeur Sony.

15